

## Step: Implementation of smooth concrete.

### Preparation and mixing



Roll the bucket of waxed concrete before opening it to decompact it..




Pour 6 l to 6.2 l of water in the 40 L bucket



Pour the powder of the smooth concrete and mix for 2 to 3 minutes maximum at medium speed.



Let rest 1 min so that air bubbles rise, then mix again for 30 seconds.

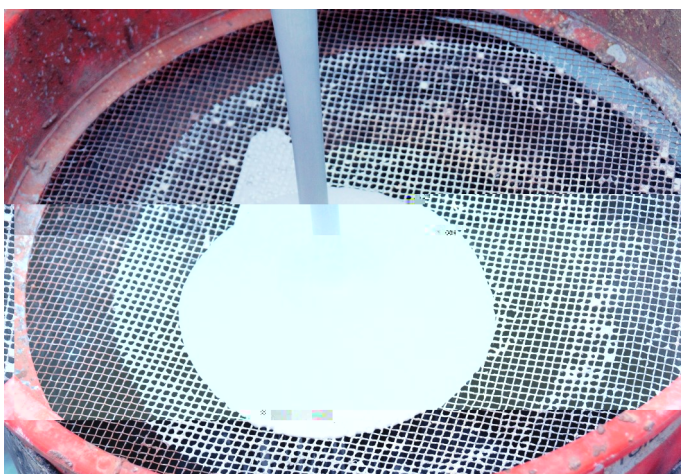

Pass then the mixture through the sieve in order to remove all the lumps.

Step: Implementation of smooth concrete.

Casting and implementation smooth concrete.



Pour the wheat on the ground in a regular and uniform way.




Use nail shoes to move in smooth concrete when needed.



Help yourself with the Flemish to put up against the walls



Beware of drips. Provide a bucket to put the Flemish in and avoid the drips on the ground.

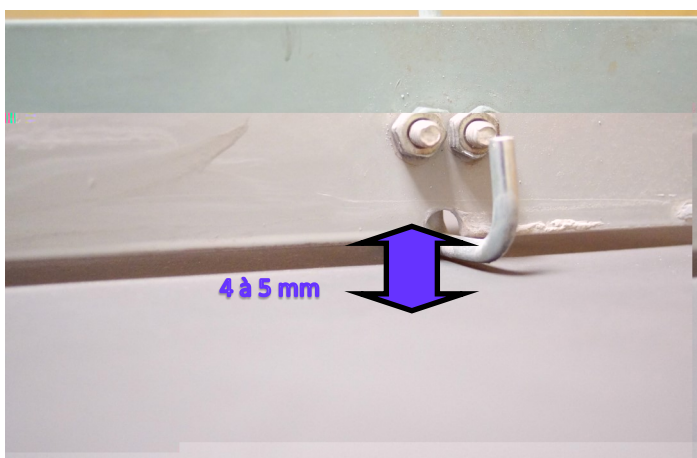

Thanks to these spikes, the spreading rule allows to adjust the smoothed concrete to the desired height.



Pull the concrete smooth with the ruler so that it has the same thickness everywhere.